



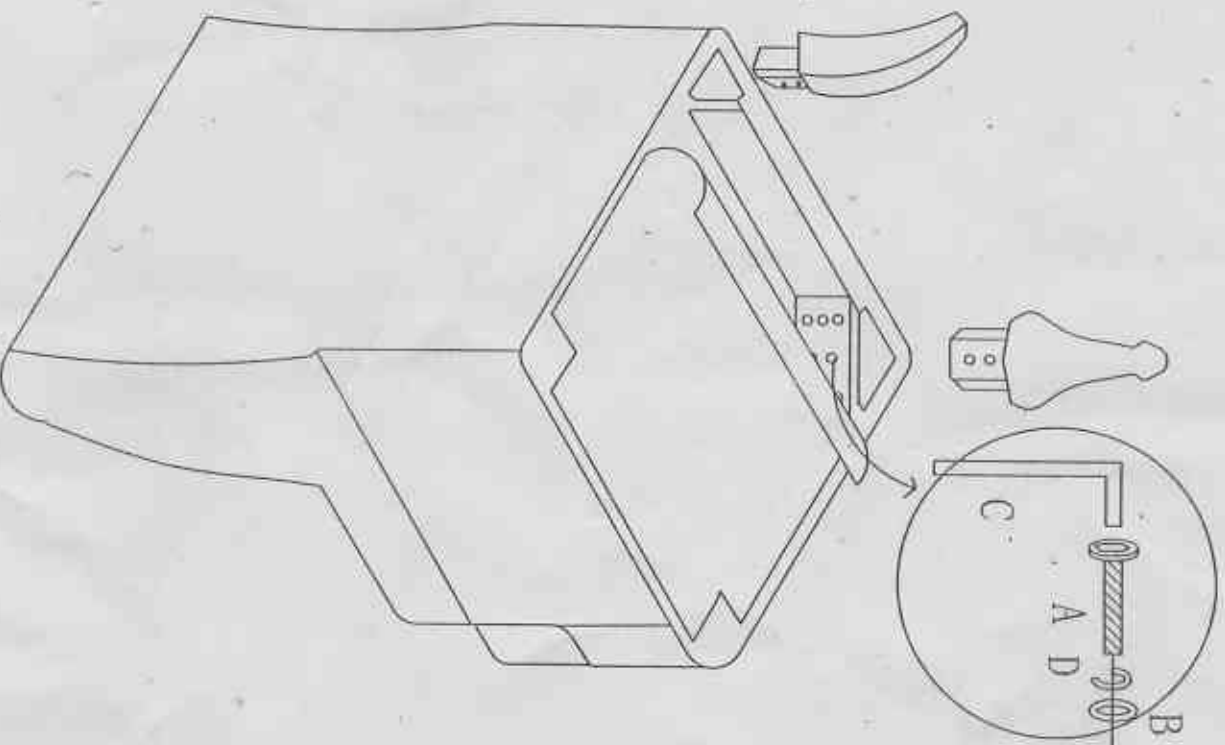



ASSEMBLY INSTRUCTIONS

MC-026

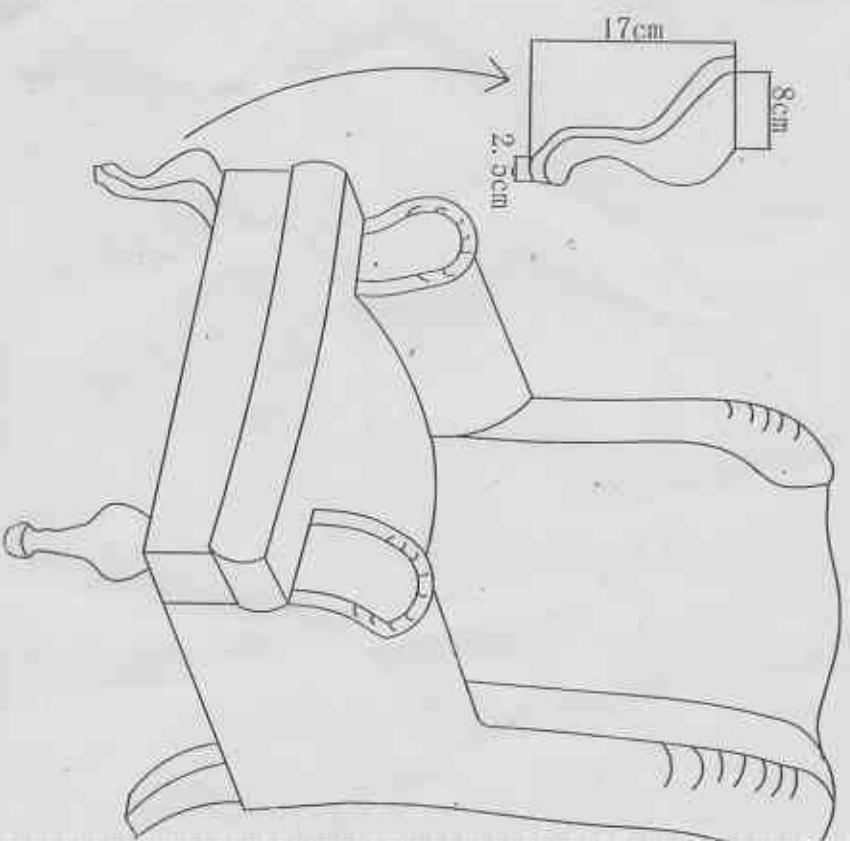

Step1:
Locate the legs and screw them into the bottom of the seat as shown.



No.	DRAWING	QTY	DESCRIPTION
A		8PCS	BOLTS
B		8PCS	SPRING WASHER
C		1PC	ALLEN KEY
D		8PCS	LOCK WASHER